



ECC0095PRO

Please ensure the replaceable Skidder is securely fastened to the Engine Case Cover before installing the product to your motorcycle

FITTING INSTRUCTIONS FOR ECC0095PRO RHS CLUTCH CASE COVER



PICTURE A

THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED OVER PAGE.

SOME PARTS MAY BE SHOWN FOR CLARITY OF INSTRUCTIONS ONLY.

DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING.

IF IN ANY DOUBT WHEN FITTING OUR PRODUCTS, CONSULT ONE OF OUR DEALERS OR HAVE FITTED BY A QUALIFIED TECHNICIAN.

PLEASE BE AWARE THAT THE PLASTIC SKIDDER IS ASSEMBLED IN POSITION FOR PACKAGING PURPOSES ONLY. YOU WILL NEED TO REMOVE IT, PLACE 1 DROP OF BLUE THREAD LOCK TO EACH BOLT AND REASSEMBLE ONTO THE ALUMINIUM ENGINE CASE COVER. DO NOT EXCEED 15NM OF TORQUE.

DIGITAL COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FROM:

WWW.RG-RACING.COM

R&G


Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



<u>TOOLS REQUIRED</u>	<u>GENERAL TORQUE SETTINGS</u>
- Set of metric Allen keys to include 5mm A/F. 8mm Socket and wrench. - Suitable Torque Wrench.	M4 BOLT = 8Nm M5 BOLT = 12Nm M6 BOLT = 15Nm M8 BOLT = 20Nm M10 BOLT = 40Nm M12 BOLT = 40Nm

LEGEND

ITEM NO.	DESCRIPTION	QTY
ITEM 1	R&G CLUTCH CASE COVER WITH SPACERS FITTED (PC0095BK)	1
ITEM 2	11mm SPACER	1
ITEM 3	22mm SPACER	1
ITEM 4	39.5mm SPACER	1
ITEM 5	M6 x 40mm BOLT	1
ITEM 6	M6 x 50mm BOLT	1
ITEM 7	M6 x 70mm BOLT	1

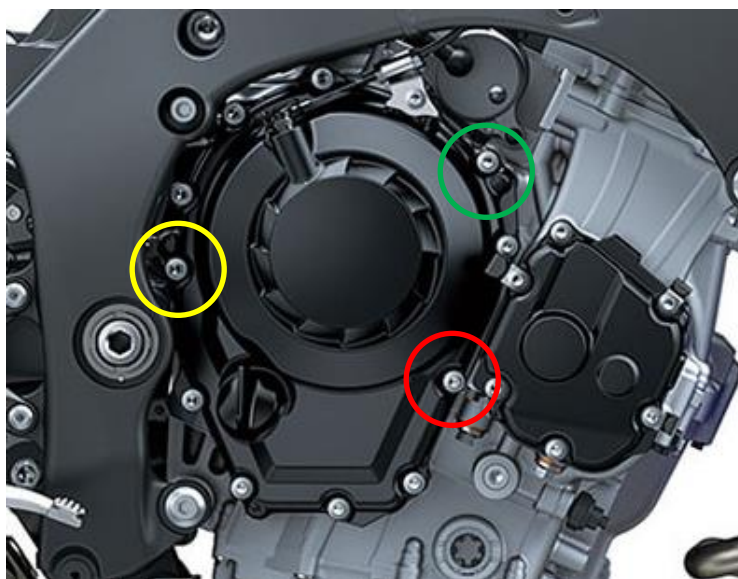

PICTURE 1



FITTING INSTRUCTIONS

- Please ensure the engine is cold before proceeding with the fitment of the R&G engine case cover.
- Remove the right-hand side fairing.
- Remove the three bolts arrowed in **picture 1**, hold the cover up to the casing to identify the correct bolts. **DO NOT REMOVE ALL THE ENGINE CASE BOLTS.**
- Offer the R&G cover up to the engine case and carefully fit over the casing. Please ensure that the three bolt holes in the cover are aligned with the holes in the engine case.
- Fit the specified bolts through the cover and spacers into the engine case:
 - YELLOW – 70mm bolt & 39.5mm spacer
 - RED – 40mm bolt & 11mm spacer
 - GREEN – 50mm bolt & 22mm spacer
- Using a 5mm Allen key or socket bit tighten the bolts evenly to pull the cover into position. **DO NOT FULLY TIGHTEN AT THIS STAGE.**
- Finally use a torque wrench set at 10 N/m (7lb/ft) to fully tighten.
- It is suggested that you check the tightness of the mounting bolts after the first heat cycle and then on a regular basis i.e. - when cleaning or once a month.
- R&G will accept no liability if the above procedures and torque setting are not followed.

ISSUE 2 – 14/05/2024 (MH)

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



NOTICE DE MONTAGE POUR ECC0095PRO PROTECTION CARTER
MOTEUR CÔTÉ DROIT



PHOTO A

CE KIT CONTIENT LES ARTICLES ILLUSTRÉS ET ÉTIQUETES SUR LA PAGE.
CERTAINES PARTIES PEUVENT ÊTRE PRÉSENTES UNIQUEMENT POUR LA CLARTÉ DES
INSTRUCTIONS.

NE PAS PROCÉDER AU MONTAGE TANT QUE VOUS N'ÊTES PAS SÛR QUE TOUTES LES PIÈCES
SOIENT PRÉSENTES.

VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE CONTINUER.

**EN CAS DE DOUTE LORS DU MONTAGE DE NOS PRODUITS, CONSULTEZ
UN DE NOS REVENDUEURS OU FAITES APPEL À UN TECHNICIEN
QUALIFIÉ.**

VEUILLEZ NOTER QUE LA FAÇON DONT LE KIT EST EMBALLÉ NE REPRÉSENTE PAS
NECESSAIREMENT LA MANIÈRE DE LE MONTER SUR LA MOTO.

SI DES RONDELLES EN CAOUTCHOUC SONT UTILISÉES POUR MAINTENIR LES COMPOSANTS
SUR LES BOULONS, ELLES PEUVENT ÊTRE JETÉES.

NOTICE DISPONIBLE AU TÉLÉCHARGEMENT SUR :
WWW.RG-RACING.COM



<u>OUTILS REQUIS</u>	<u>VALEURS DE SERRAGE</u>
• Clés Allen 5mm • Clé à cliquet + douille 8mm • Clé dynamométrique	M4 BOULON = 8Nm M5 BOULON = 12Nm M6 BOULON = 15Nm M8 BOULON = 20Nm M10 BOULON = 40Nm M12 BOULON = 40Nm

LÉGENDE

ARTICLE NO.	DESCRIPTION	QTÉ
ARTICLE 1	PROTECTION CARTER MOTEUR R&G (PC0095BK)	1
ARTICLE 2	11mm ENTRETOISE	1
ARTICLE 3	22mm ENTRETOISE	1
ARTICLE 4	39.5mm ENTRETOISE	1
ARTICLE 5	M6 x 40mm BOULON	1
ARTICLE 6	M6 x 50mm BOULON	1
ARTICLE 7	M6 x 70mm BOULON	1

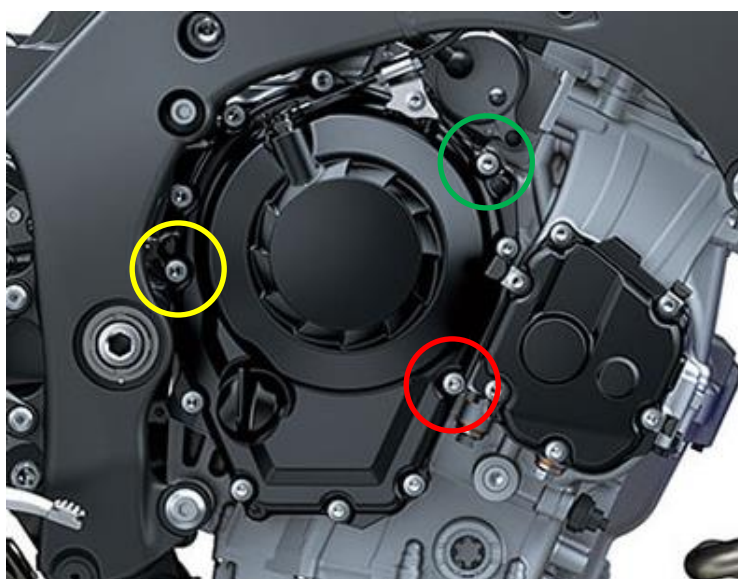


PHOTO 1

NOTICE DE MONTAGE

R&G

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



- Veuillez-vous assurer que le moteur soit froid avant de procéder au montage de la protection carter moteur R&G.
- Déposer le carénage latéral droit.
- Retirez les trois boulons fléchés sur la photo 1, maintenez le couvercle contre le boîtier pour identifier les bons trous. NE RETIREZ PAS TOUS LES BOULONS DU CARTER MOTEUR.
- Présentez le couvercle R&G sur le carter moteur et placez-le soigneusement sur le carter. Veuillez-vous assurer que les trois trous de boulons du couvercle soient alignés avec les trous du carter moteur.
- Insérez les boulons spécifiés à travers le couvercle et les entretoises dans le carter moteur :
 - JAUNE – 70mm boulon & 39.5mm entretoise
 - ROUGE – 40mm boulon & 11mm entretoise
 - VERT – 50mm boulon & 22mm entretoise
- À l'aide d'une clé Allen 5mm, serrez les boulons uniformément pour mettre le couvercle en position. NE SERREZ PAS COMPLÈTEMENT À CE STADE.
- Enfin, utilisez une clé dynamométrique réglée à 10 N/m (7lb/ft) pour serrer complètement.
- Il est suggéré de vérifier le serrage des boulons de fixation lors du nettoyage ou une fois par mois.
- R&G n'acceptera aucune responsabilité si **les procédures ci-dessus et le réglage du couple ne sont pas suivis.**

ISSUE 1 – 13/11/2023 (MH)