

## 818500 Harley Davidson Pan America 1250 Shock Shield Fitting Instructions

### Kit Includes:



1X	CFK818500	Bracket
1X	C24444	Rubber Flap
2X	CBOLM50002	M5 X 10mm Stainless Button-head Bolt
2X	CNUTM50002	M5 Stainless Nyloc Nut
2X	CWASM50002	M5 Stainless Washer

- The Pyramid Shock Shield is easy to fit - attach the rubber flap to the bracket as shown below.

**Note:** Do not overtighten the fittings as this will distort the rubber flap. Once the nylon is engaged, the bolts cannot work loose.

- Now simply remove the pillion footpegs and refit them with the Shock Shield in place behind them (see image below).
- Check fixings periodically.

**Any questions?**  
support@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk

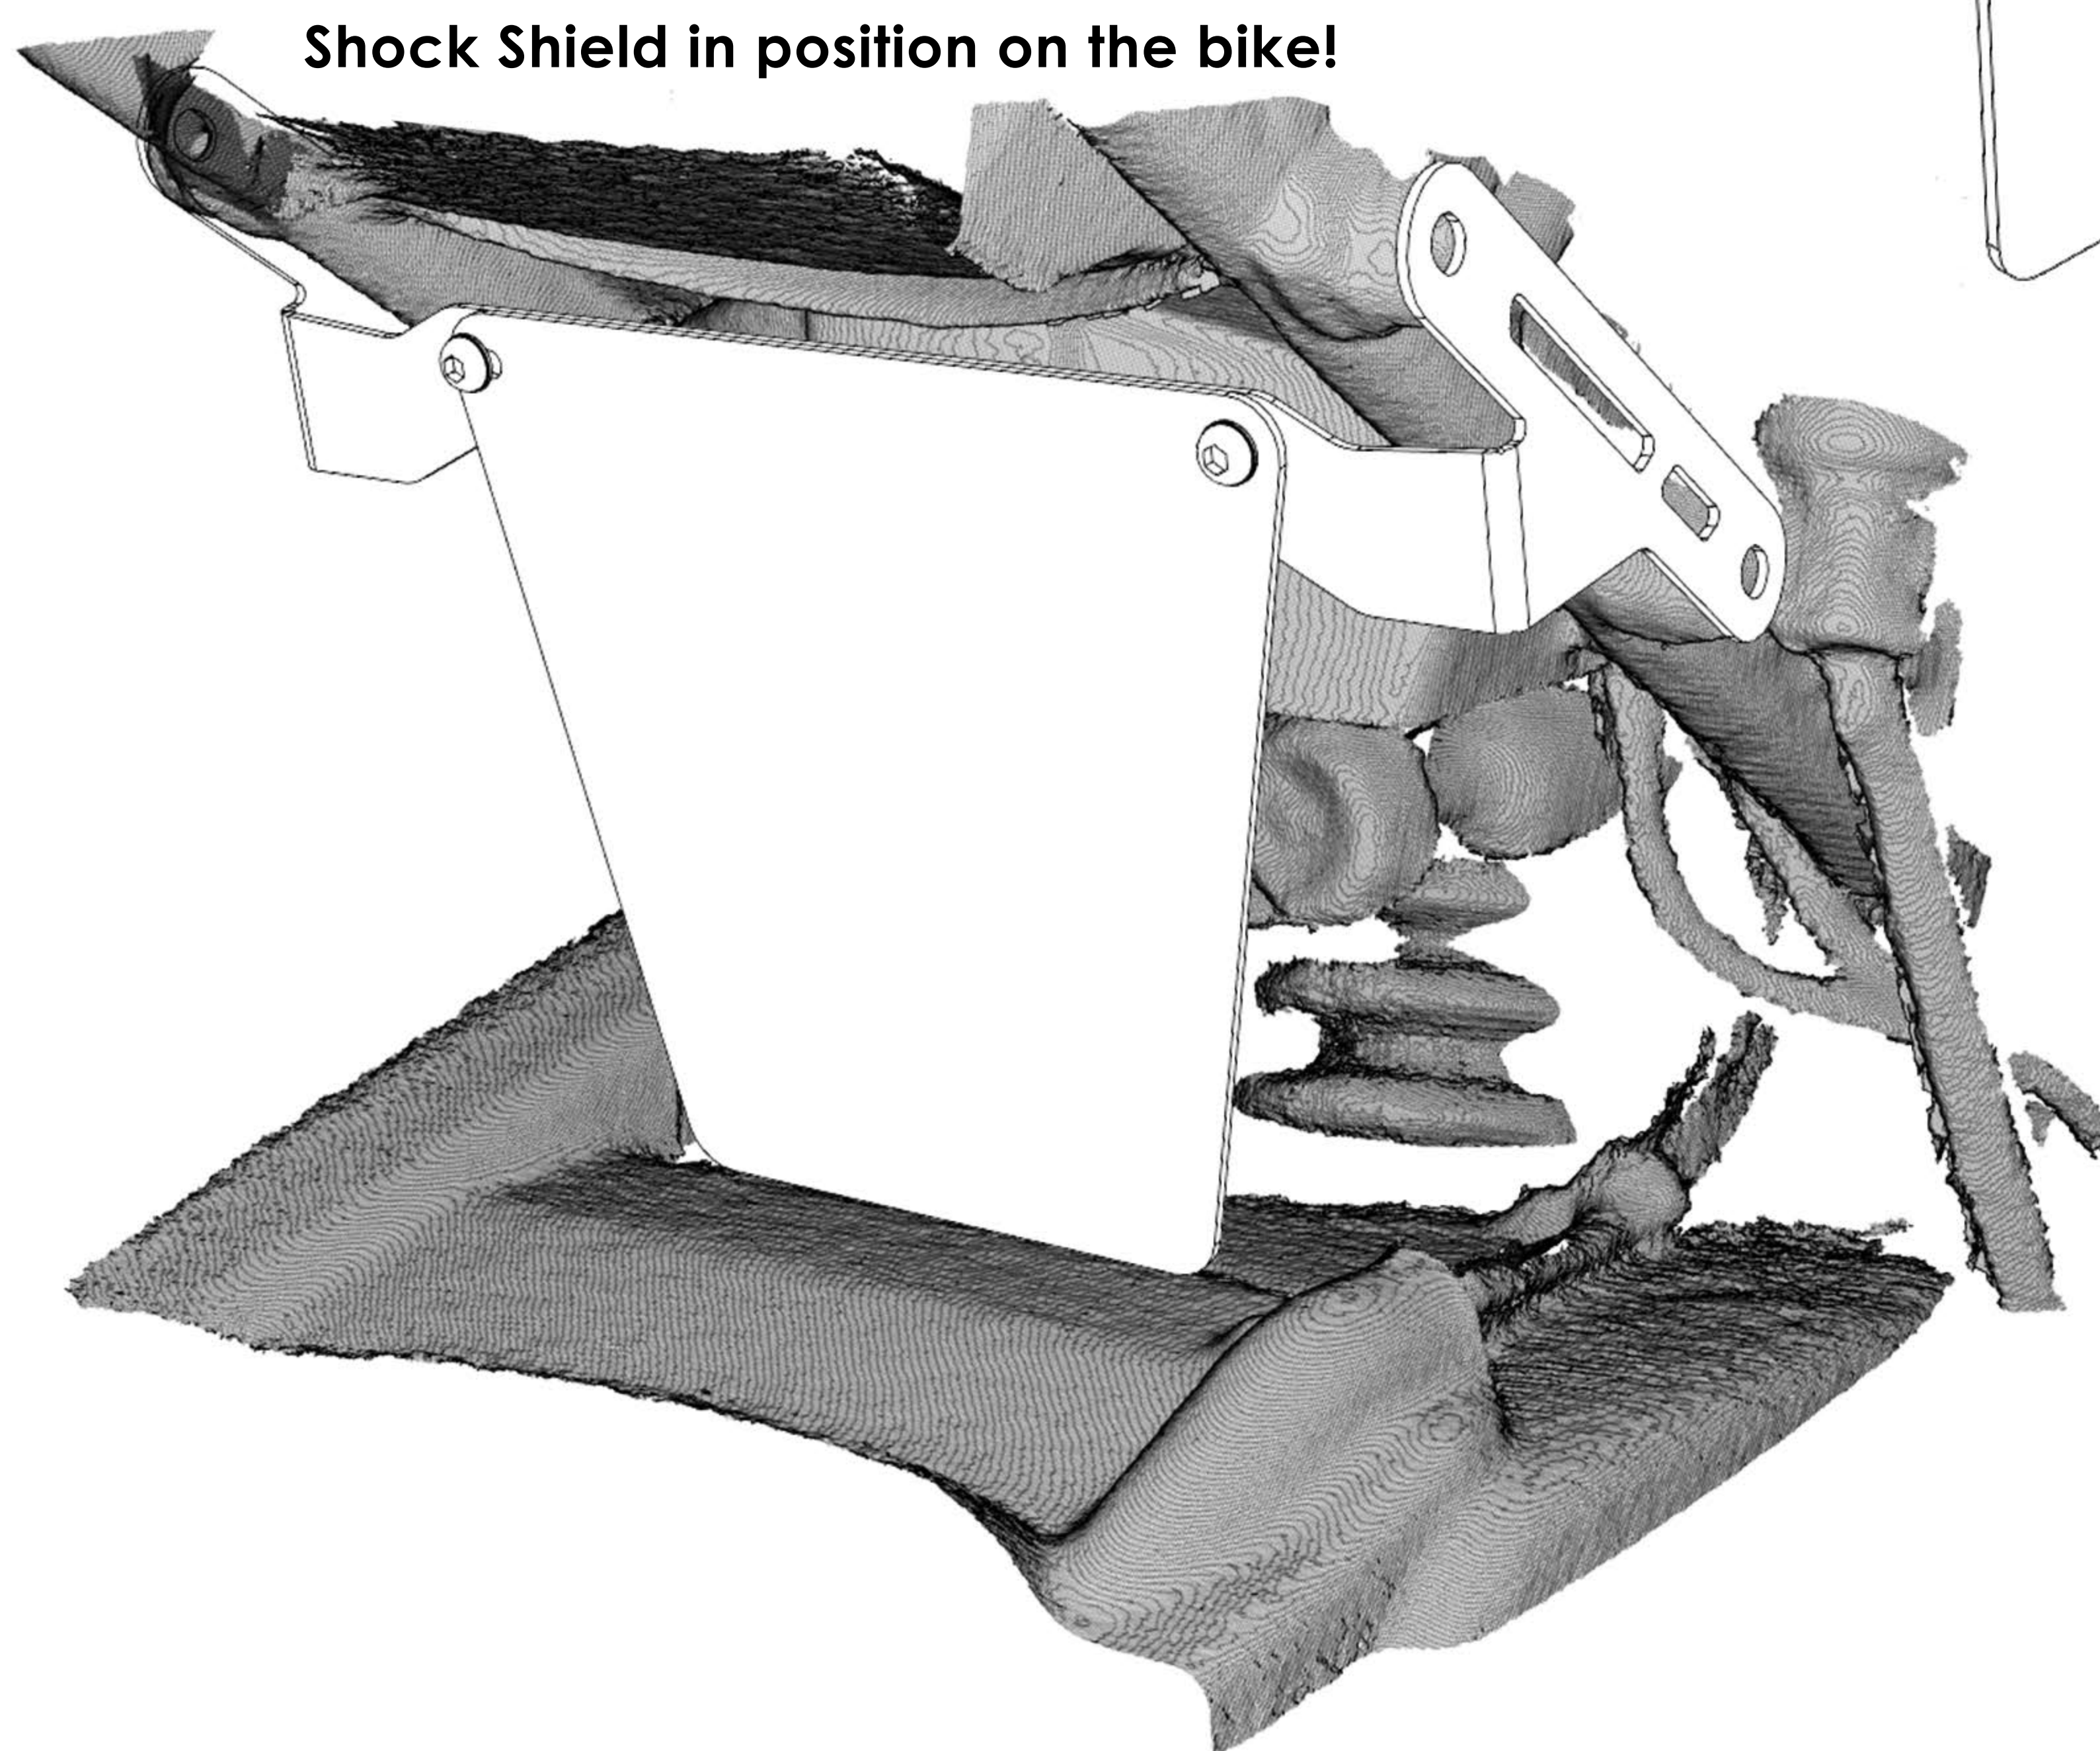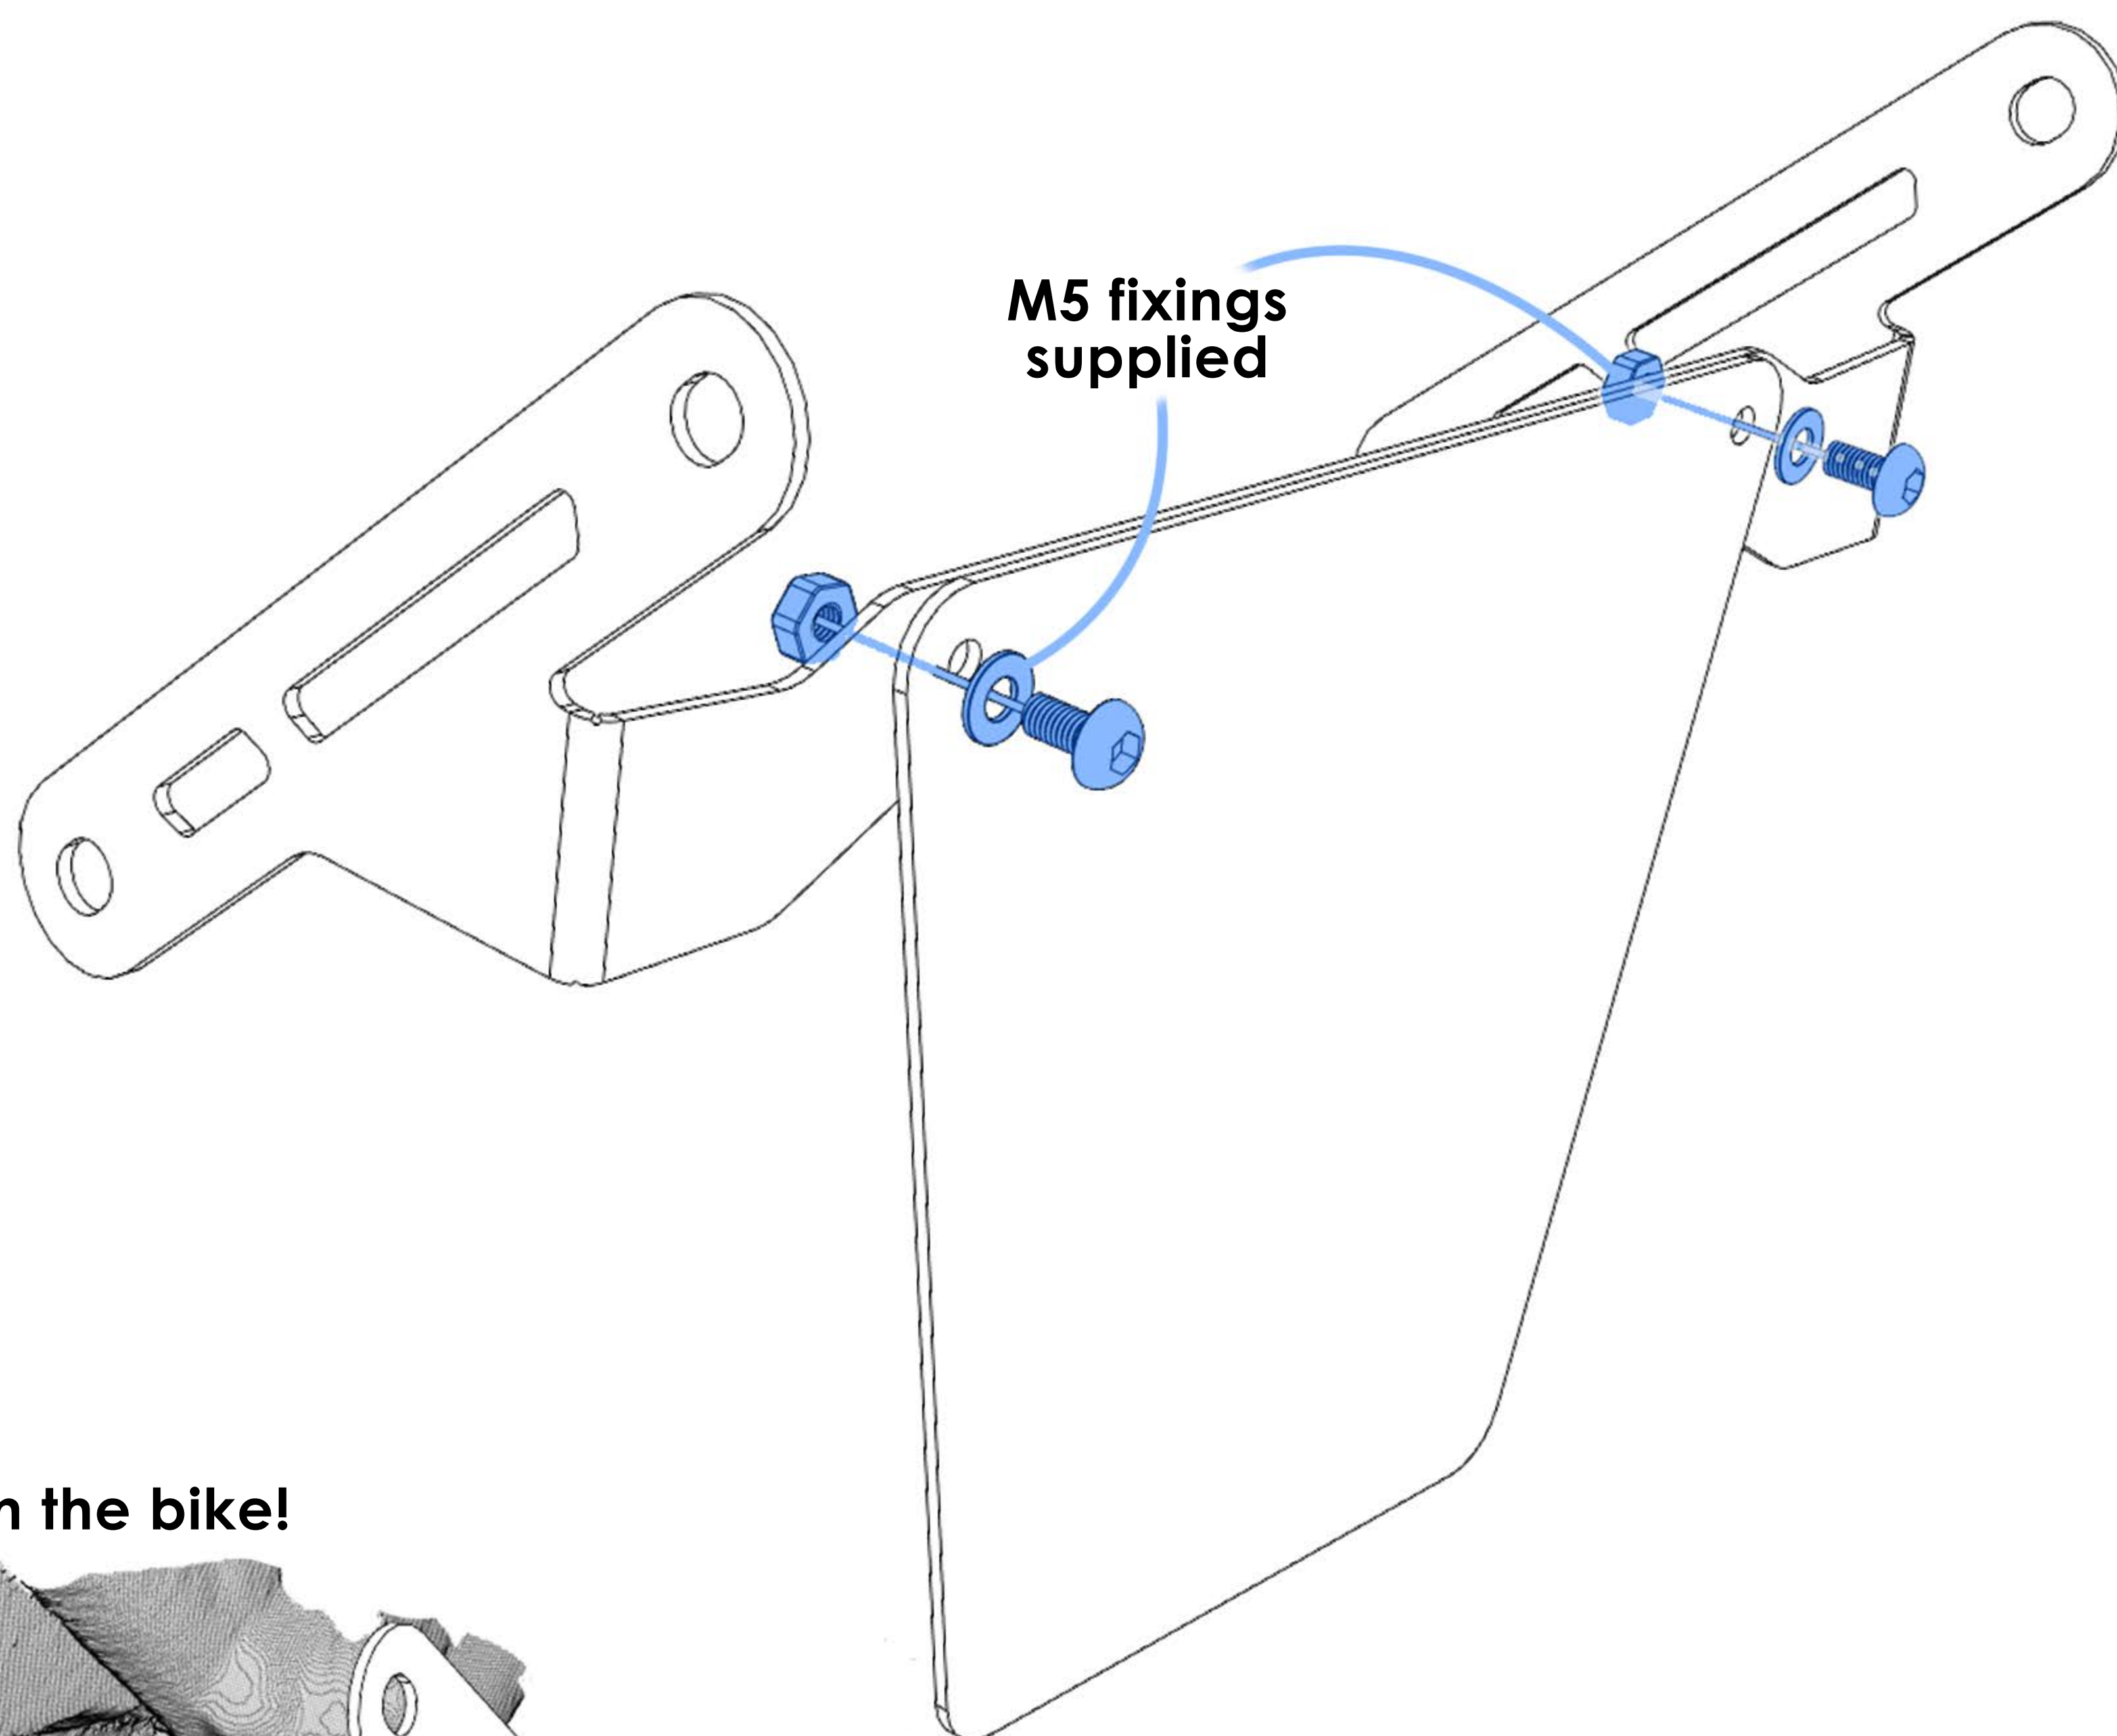

**Did you know.. Harley-Davidson was founded in 1903!**

Illustrations and pictures are always clearer on our web version!